
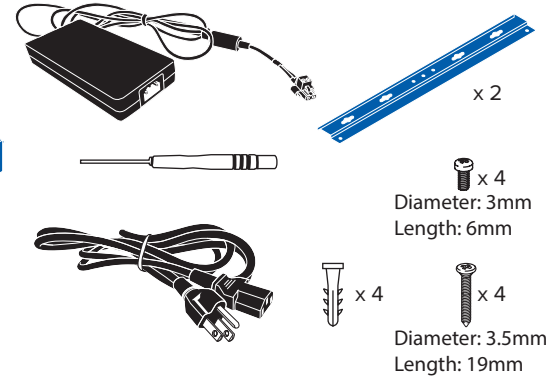


Installing the Avigilon Blue Connect Device

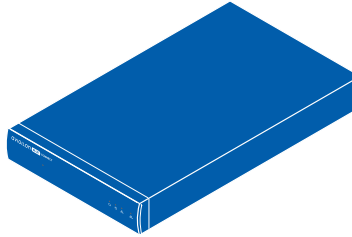


1 Unpack the Box

Read all the instructions before you start.

Note down the serial number located on the underside of the device.


2 Plug in Ethernet Cable

Connect the camera uplink and the cameras to a DHCP-enabled router either through a PoE switch or directly.

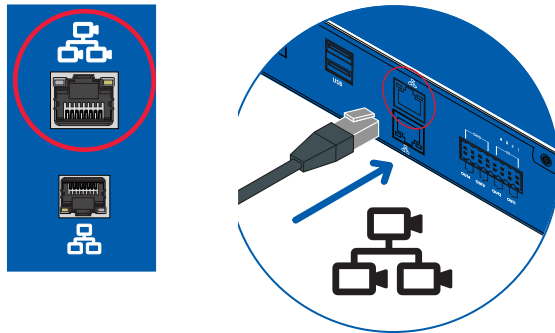


3 Plug in Power Adapter

Attach the power supply using the supplied screwdriver.

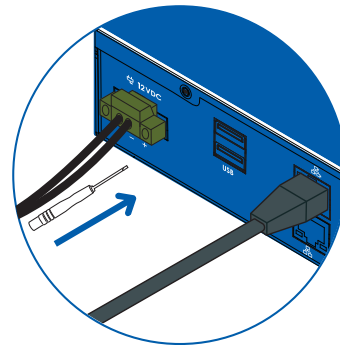

4 Plug into Power Outlet

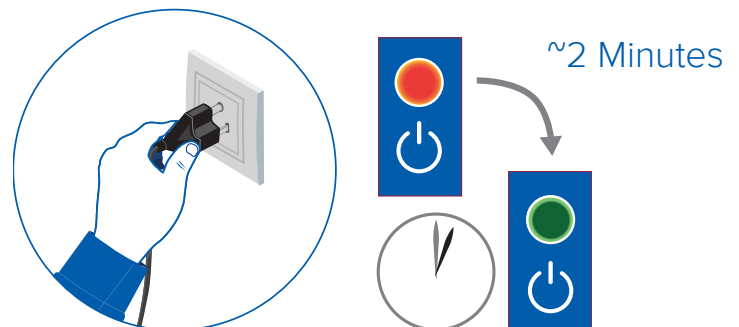


For alternative installation guidelines, see: connect.blue.avigilon.com/support

5 Open the Avigilon Blue Connect Device Dashboard

a Locate and select the Avigilon Blue Connect device

Use File Explorer (Windows) or Finder (Macintosh) on a computer connected to the network. The Avigilon Blue Connect (or VMA-BLU-16Cxx) device is identified by its serial number.

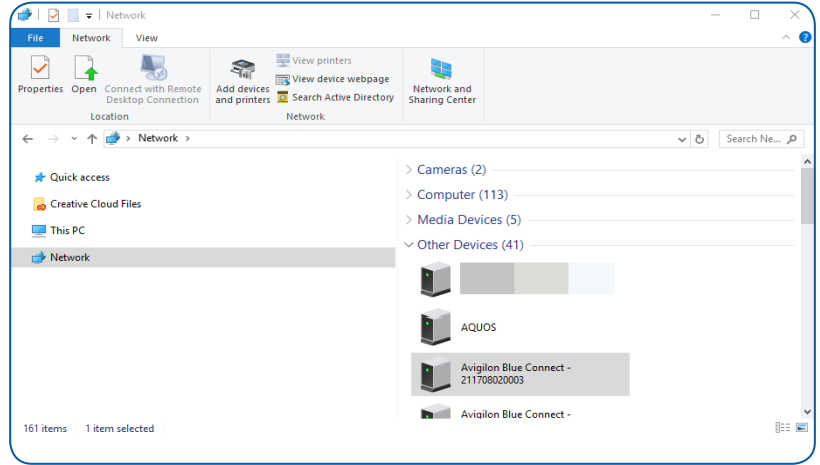


NOTE: If the device is connected to your network but cannot be located in Explorer or Finder, use ARP (MAC address found on unit label), or check your Router/DHCP Server to find the device IP address, try the device hostname VMA-BLU-16Cxx-<serial number> from your browser, or contact Avigilon™ Support.

b Click to open the Avigilon Blue Connect device dashboard in your web browser


c Click past any connection messages displayed by your browser

You will see two warning messages that differ slightly depending on your browser.

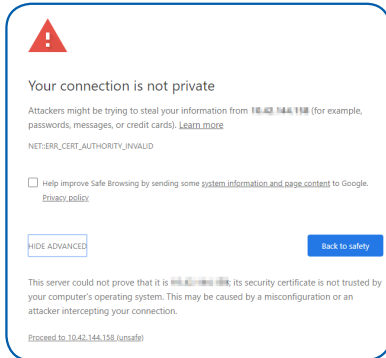

Chrome browser:


Click **Advanced**.
Click **Proceed to ...**

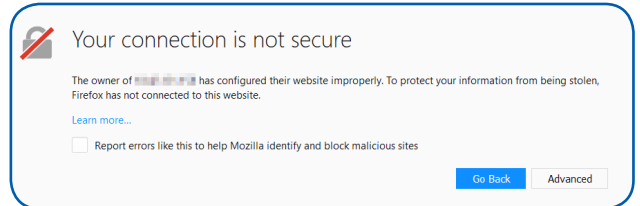


Firefox® browser:

Click **Advanced**.
Click **Add Exception**.
Check **Permanently store this exception**.
Click **Confirm Security Exception**.

d Create a strong password for the device

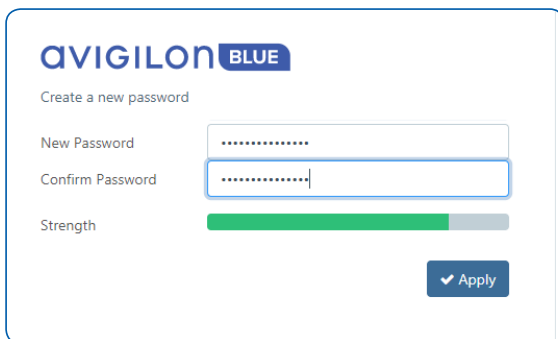

If you are asked to sign in to the device, enter the user name **administrator** and the password you just created.

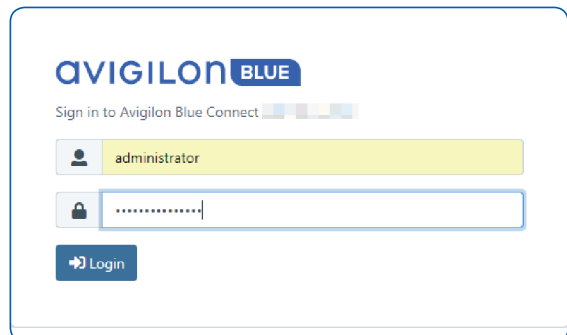

6 Activate the Avigilon Blue Connect Device

If you don't have an activation code, go to **Generating an Activation Code**

- a Go to the Avigilon Blue Connect device dashboard
- b Type or paste the activation code in the Avigilon Blue Connect panel
- c Click **Activate Avigilon Blue Connect**




Generating an Activation Code



- 1 Open a second browser tab and go to **blue.avigilon.com**

- a Sign in to the Avigilon Blue cloud
- b Choose your region
- c Enter credentials

Use dealer or subscriber credentials. The user must be assigned to either the Manager or Administrator role.

- 2 Generate an Activation Code in the Avigilon Blue Platform


- a Click 
- b Click **Add Server**
- c Specify the site
- d Get the code
- e Paste the code in the panel on the Avigilon Blue Connect device dashboard

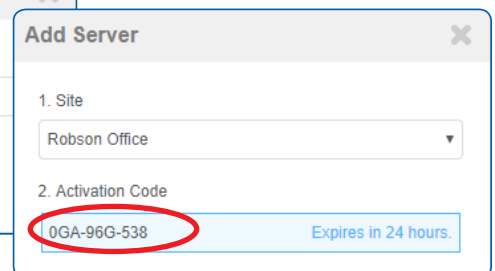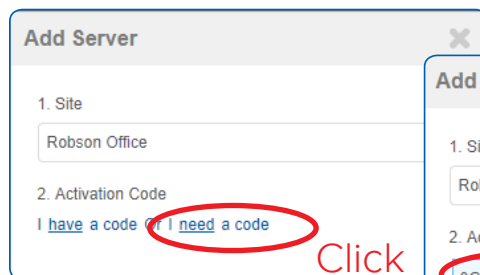

Click

Copy

Optional Wall Mount

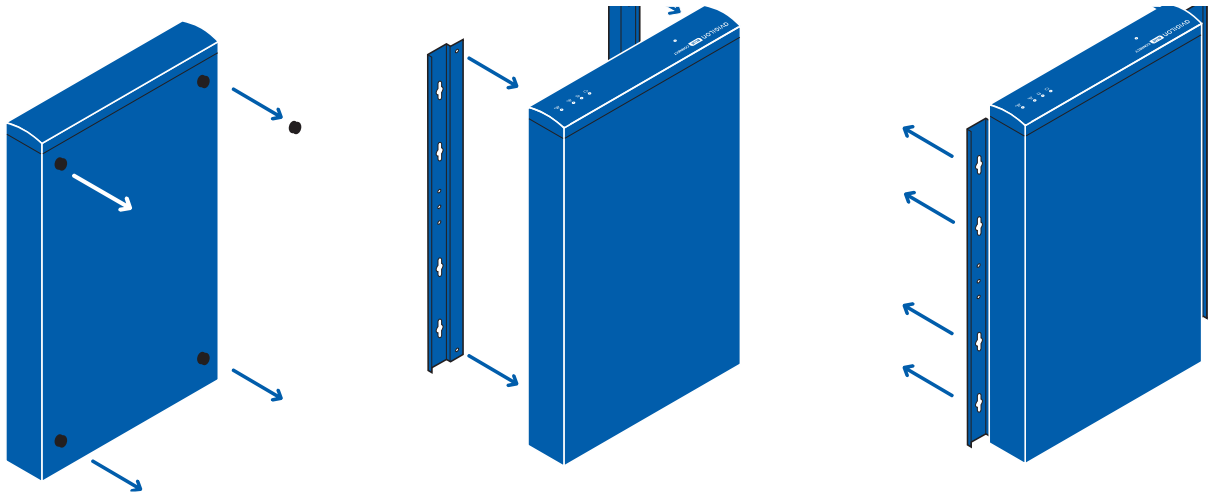

Download the Avigilon Blue App



For more information, visit connect.blue.avigilon.com/support